# BURGMAN 400 (from 2018 onwards)





# **Touring Screen (Clear)**

#### 94600-19810-000

7.5cm higher than normal screen, which contributes to your comfortable riding.



## **Knuckle Cover**

#### 57300-19830-YKV

Protect your hands against wind and weather with essential original accessory items. Easy to mount.



## Plastic Top Case (47L)

#### 990D0-V4700-000

47L. Black with anodized aluminum finished cover and smoked

\*Required for installation of carrier plate for top case. (p/n 990D0-19K00-060)

\*Max. load: 3 kg Max speed: 130 km/h



015-006

015-005





015-007

# **Grip Heater**

#### 57100-19812-000

It has three different heat settings and a maximum power consumption of 53.9W.



### **Cushion for Top Case**

#### 990D0-V4700-005

Improves riding comfort of the passenger, to be installed on top case. (p/n 990D0-V4700-000)

\*It is not a backrest. Do not put your weight on it.



# **Inner Bag For Top Case**

#### 990D0-TCBAG-000

Grey textile inner bag for top case 47L. Protect your belongings against scratches and damages, while you have the contents of your top case available in one bundle without taking it off.



# **Top Case Adapter Plate**

#### 990D0-19K00-060

Carrier for mounting large top case, 47L. Required for installation of



015-004

015-003

COMBI 0.2h





top case. (p/n 990D0-V4700-000)